

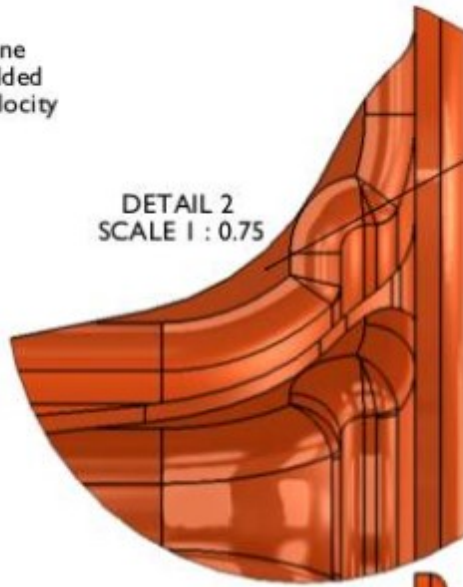



Main VRZ absorption zone gives the protection cap added strength. By reducing the velocity of falling objects.

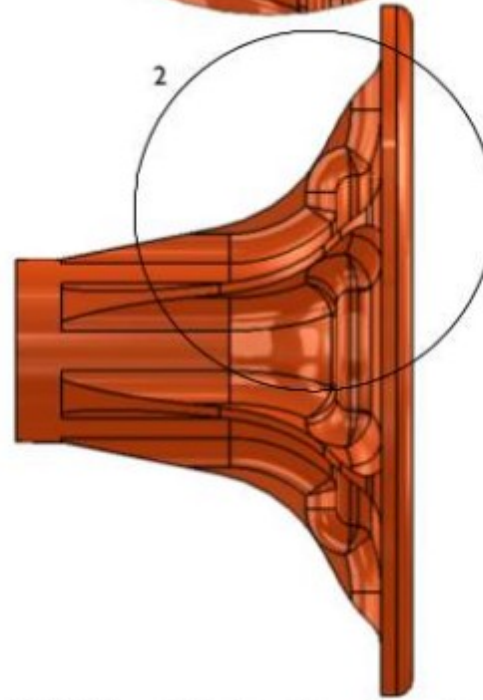

External VRZ strength fins including stress relief radius to eliminate any force coming from the top of the protection cap.

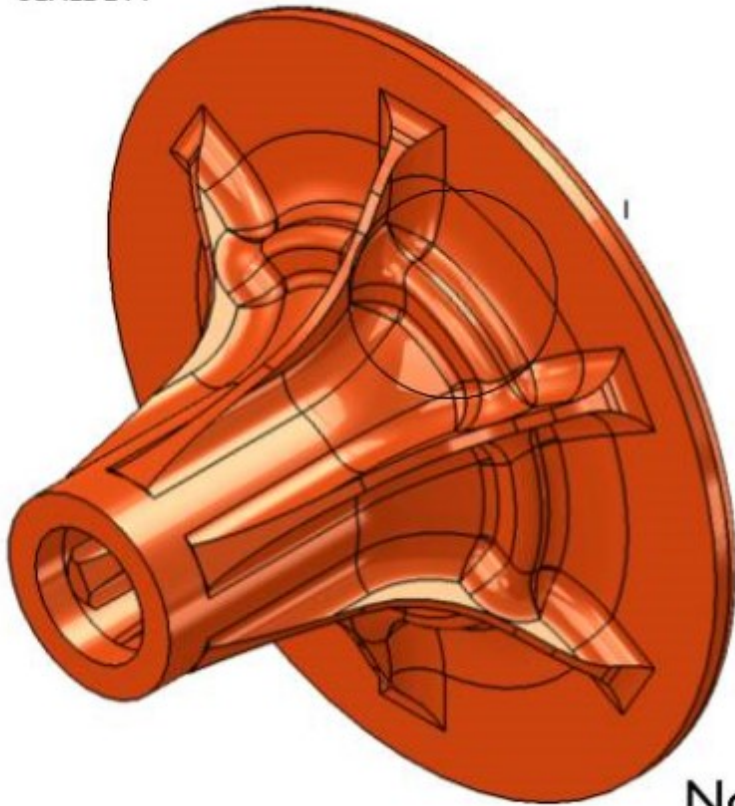

DETAIL 3
SCALE 2 : 1

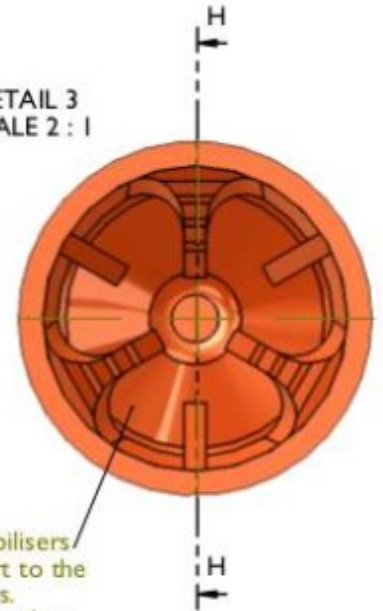

Internal staged VRZ stabilisers provide additional support to the exterior VZR zones. Allowing for controlled rebar movement under impact load.



SECTION H-H
SCALE 1 : 1

Custom internal angle to aid in rebar

Note: VRZ = Velocity Reduction Zone